

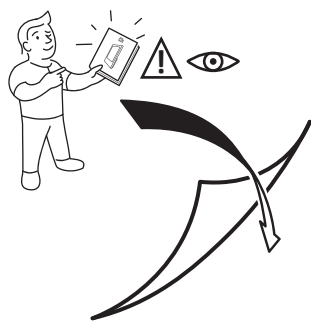
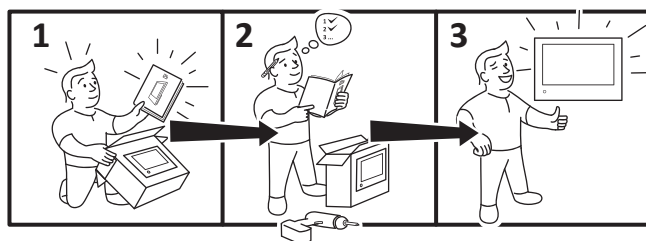
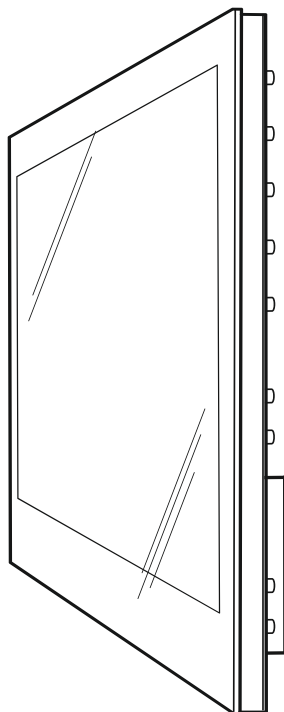
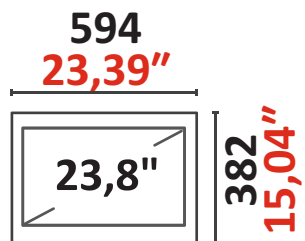


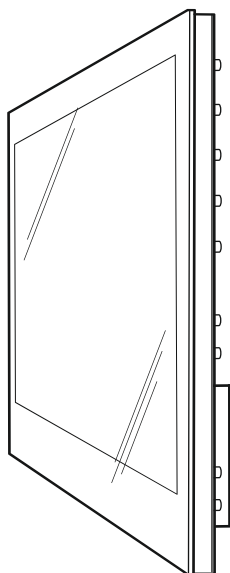

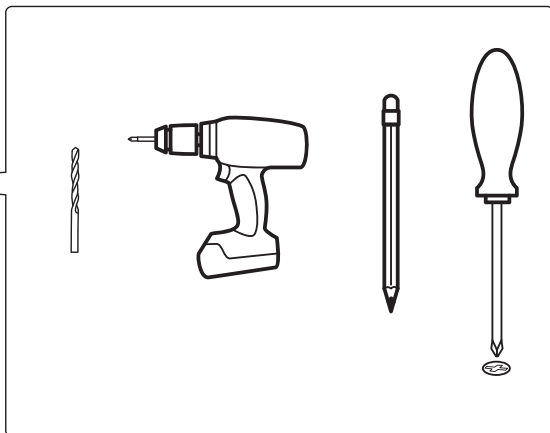

x8

A1

blum

DTC



x8

A2

KESSEBÖHMER

HÄFELE




x4

B




1

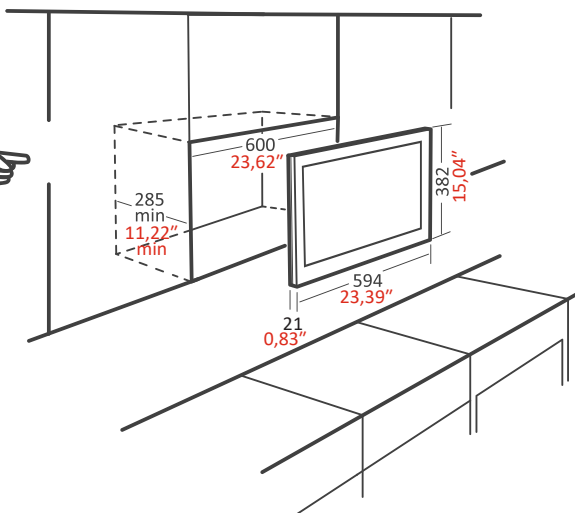

2



A

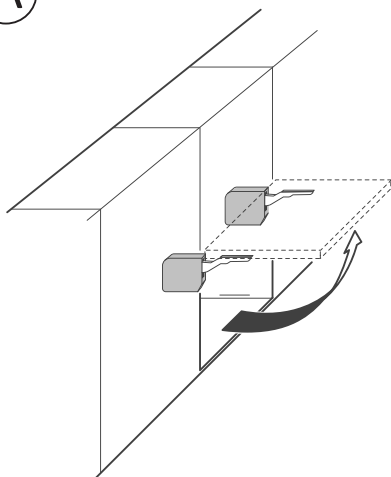

1

DTC
DTC TOP STAY SF
SF00AH02A



2

blum
Aventos HK TOP27




3

KESSEBÖHMER
FREEflap forte-E

HÄFELE
Free Flap 3.15 E



B

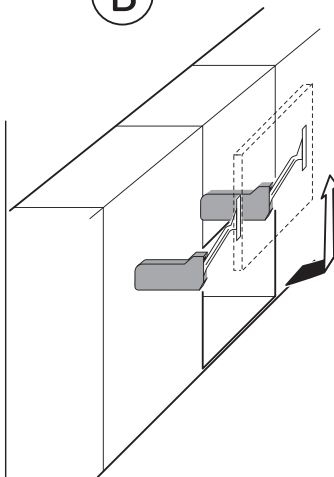

KESSEBÖHMER
FREEslide Q3us




HÄFELE
Free Up Q3us






A1

DTC
Global Quality Benchmark

DTC TOP STAY SF

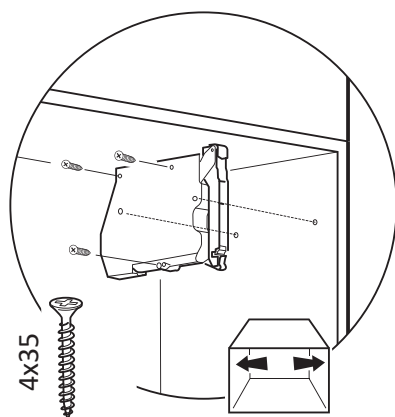
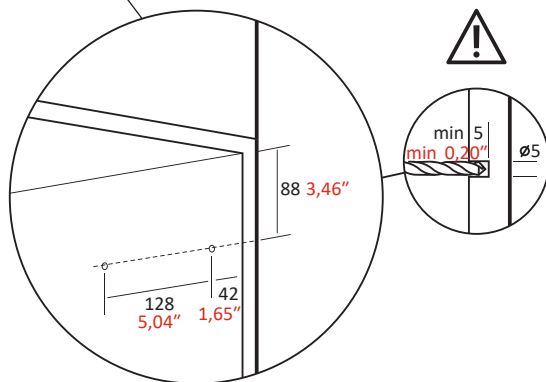
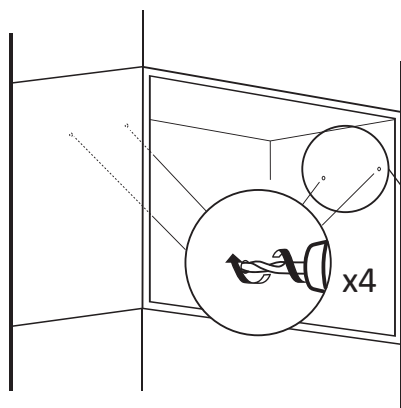


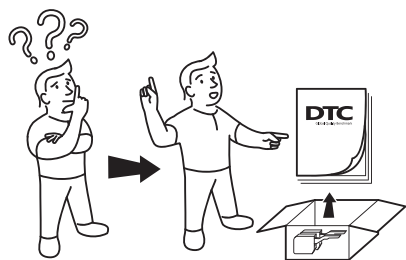
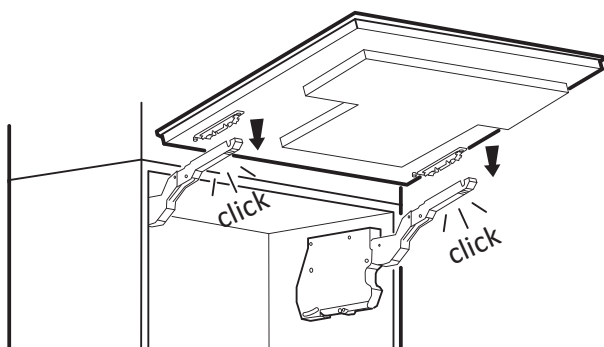
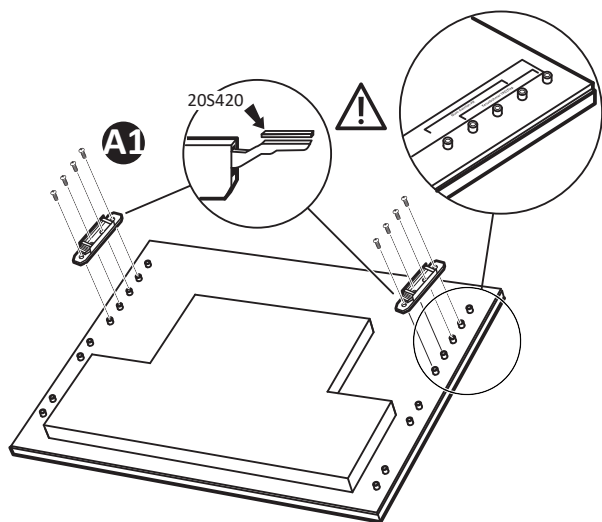


A2

blum

Aventos HK TOP27

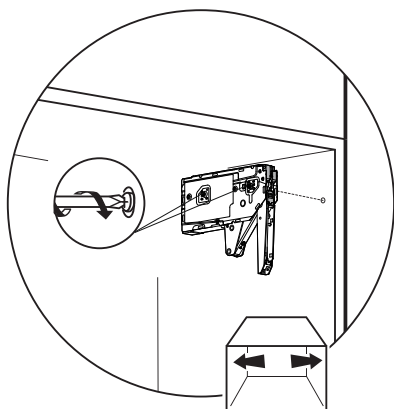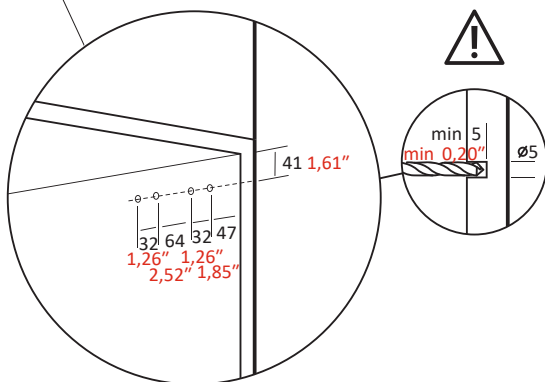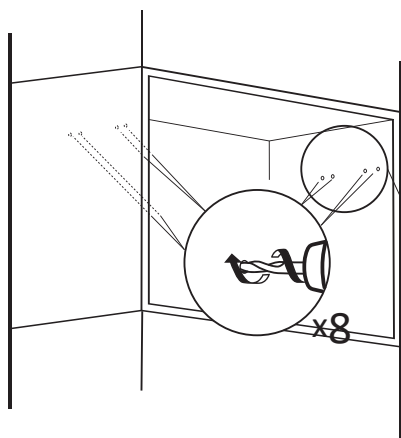


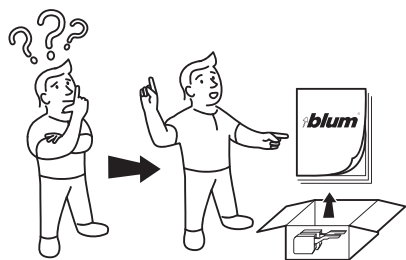
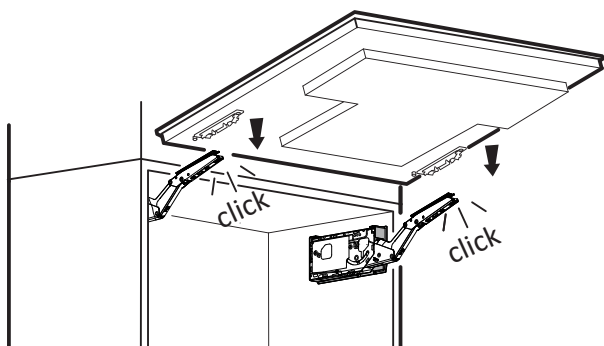
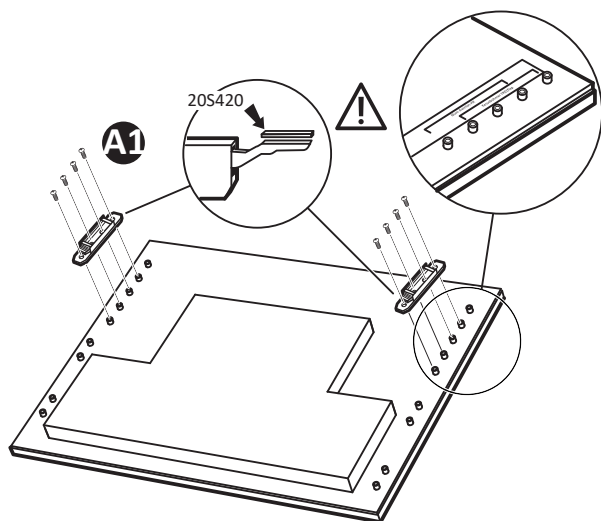


A3

KESSEBÖHMER
FREEflap forte-E

HÄFELE
Free Flap 3.15 E

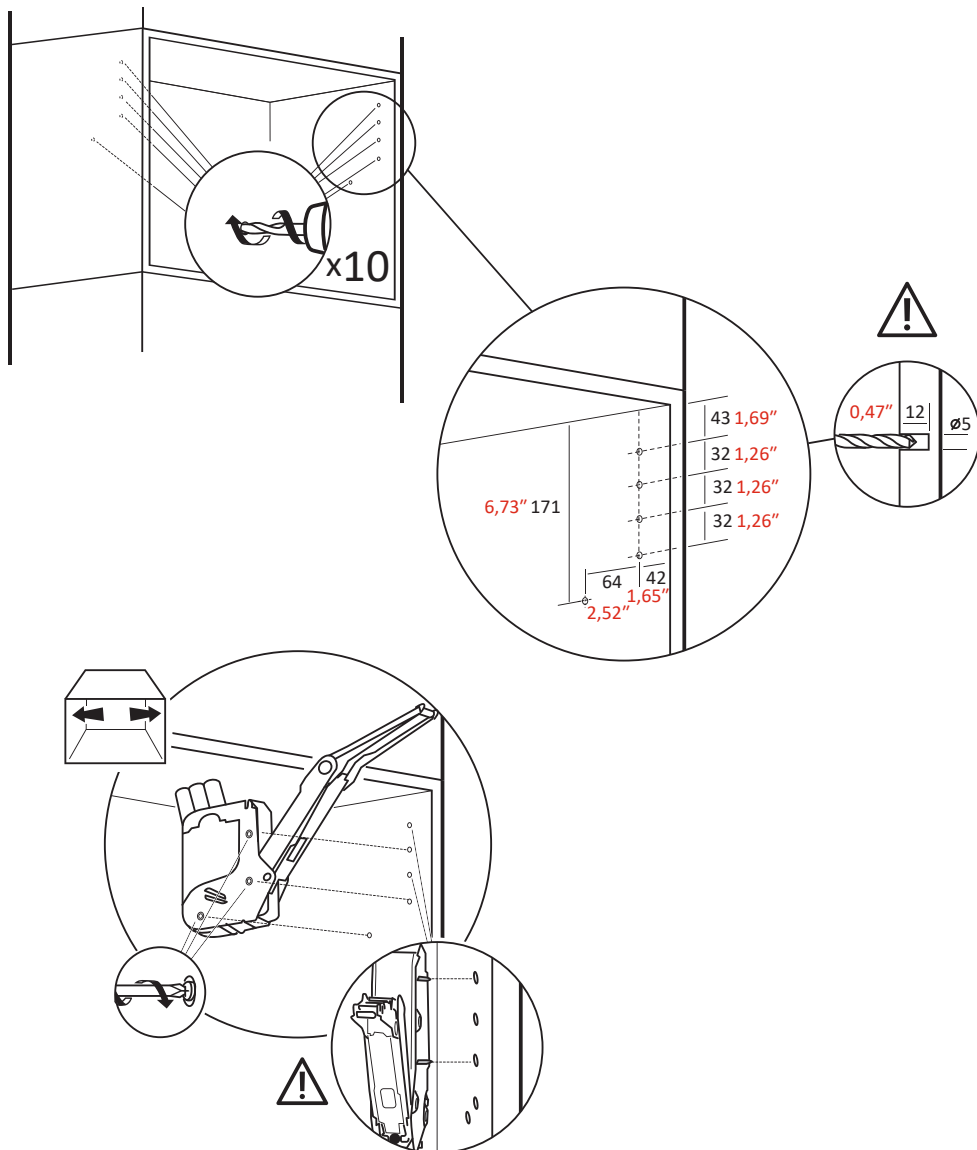



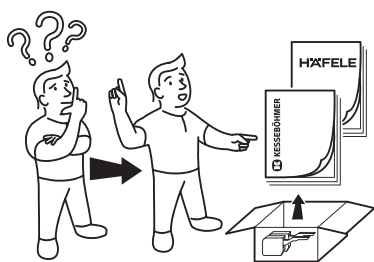
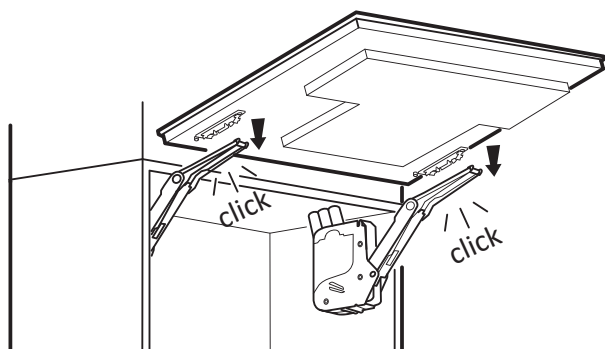
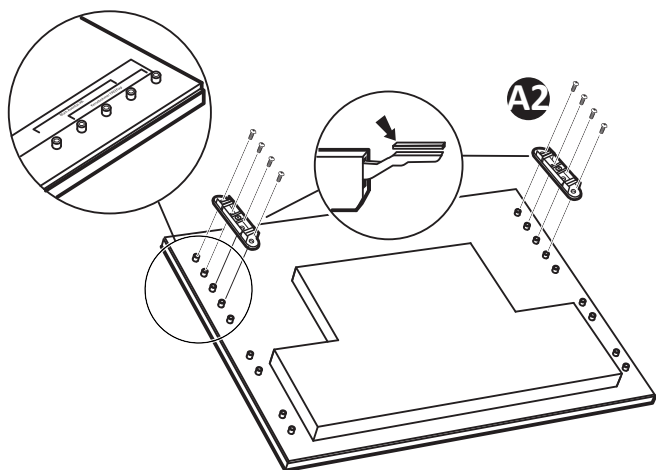


B

KESSEBÖHMER
FREEslide Q3us

HÄFELE
Free Up Q3us

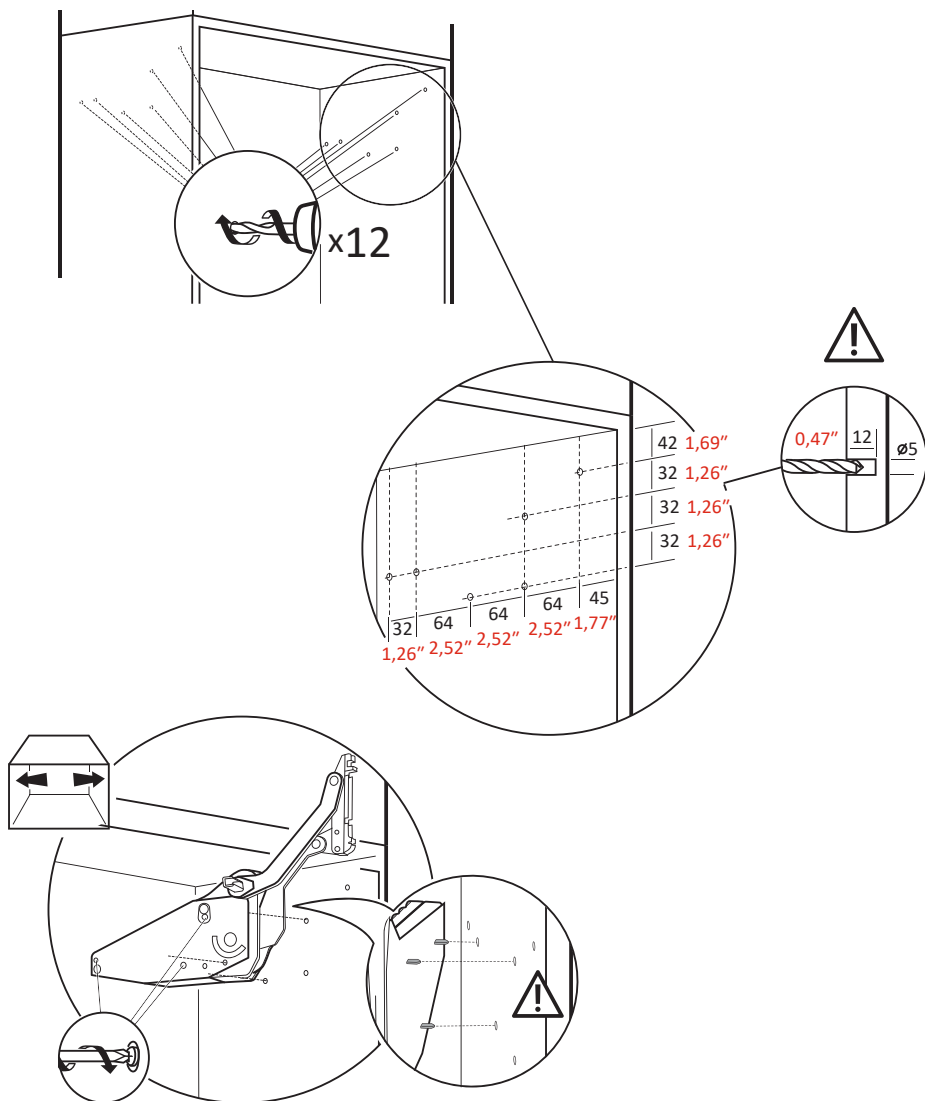


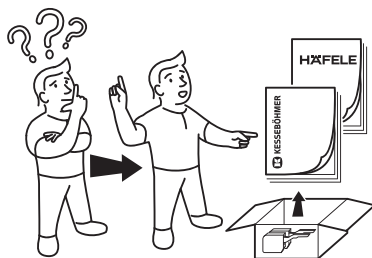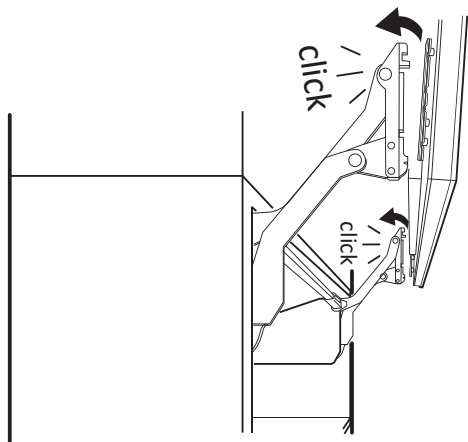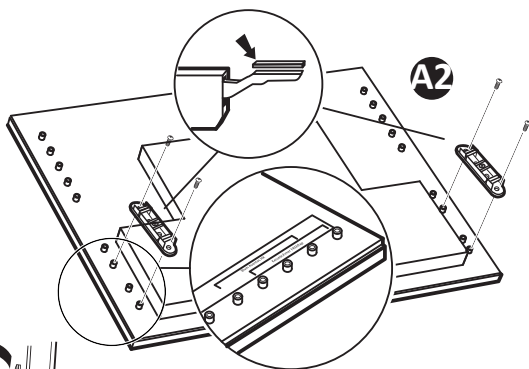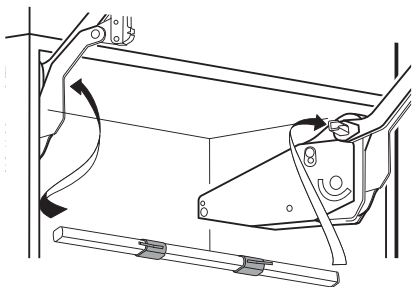


3




A

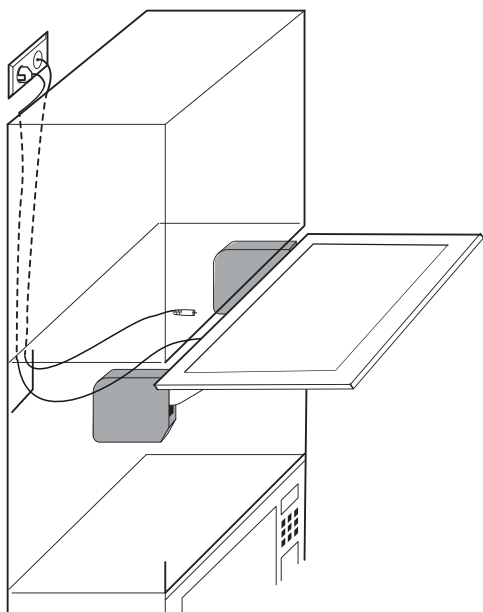



B

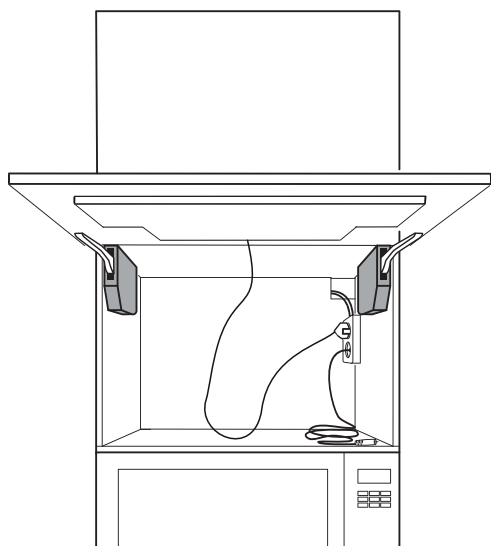





4

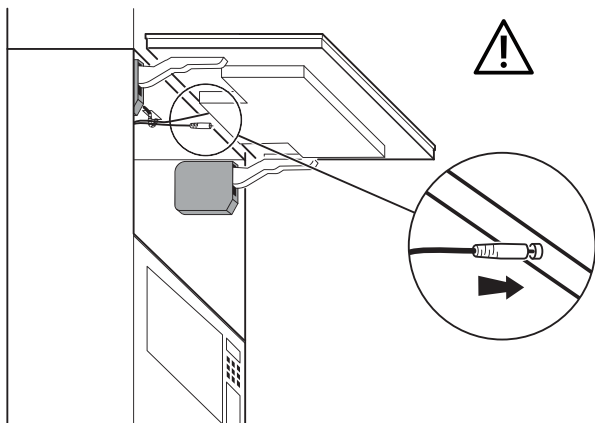

5

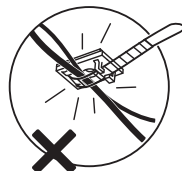
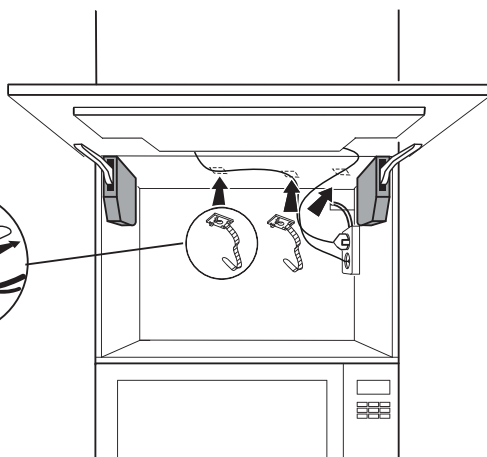


6

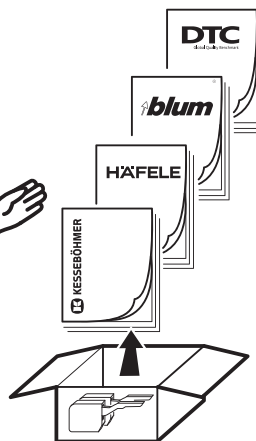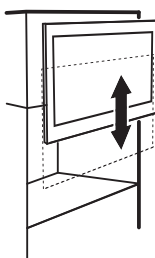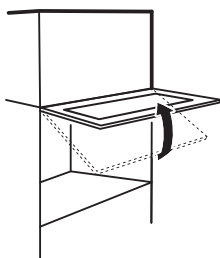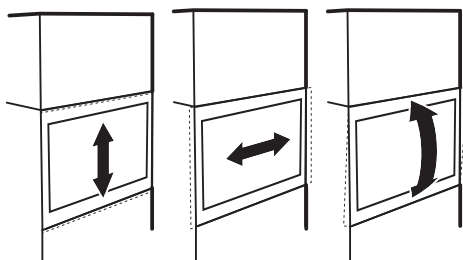

7

A

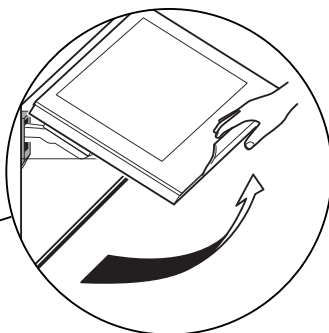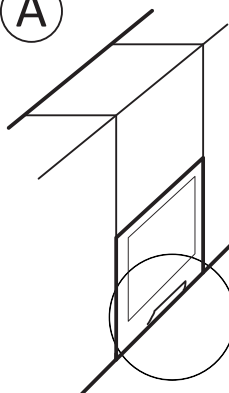

B

